




Trigger Coil

⚠ CAUTION

DO NOT rotate flywheel during test or damage to meter may result.

1. Use an ohmmeter to perform the following test.

149-223Ω

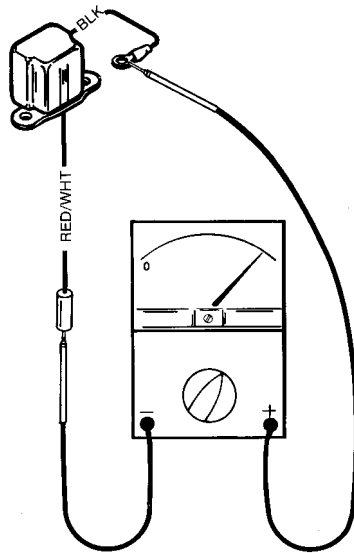


2. If meter readings are other than specified, replace trigger coil. Refer to "Ignition Components Removal and Installation," following.

Ignition Coil

A. SPARK TEST

1. Install spark gap tester (91-63998A1) between high tension spark plug lead and engine ground.

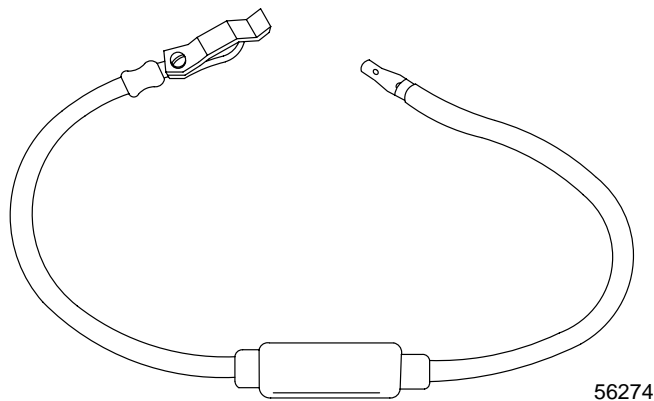

2. Crank engine over using starter rope. Spark should occur at tester.
3. If test yields no spark, or engine will not run properly, proceed to tests B thru E.