


- 4 Remove the wire from the wire guides along the right-side of the printer.
- 5 Disconnect the thermistor feedback connector in the left front side of the Fusing Assembly (Figure 6-15).

Figure 6-15

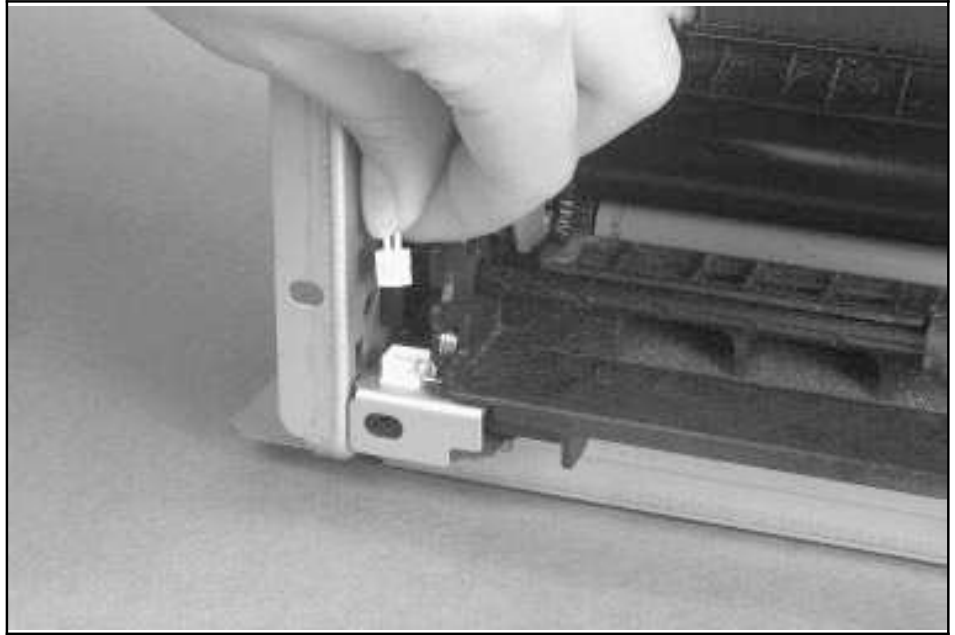

Heating Element Removal (3 of 3)

- 6 Lift the Heating Element out.

To reinstall

Make sure the connectors are properly reattached.